

AIR SCENTING & PURIFICATION IN ONE PRODUCT

Capsule



Scent Emotions

FRAGRANCES EMBEDDED IN POLYMERS
& AIR TREATMENT SOLUTIONS

CAPSULE.



**AIR SCENTING
& PURIFICATION**
brought to your closet,
shoe rack and
kitchen waste closet

C ONCEPT.

Capsule is specifically designed to be install in **wardrobes, shoe racks, kitchen waste closets** or to be **integrated into any piece of furniture**. Nevertheless, it can also be placed directly on the **wall of any room**.


Its carefully and discreet design enable the device to be either installed in the wall or embedded into furniture.

Capsule functions with an aroma pad which needs to be inserted into the device which, with the help of a fan that will constantly move the air, will aromatise the space around it.




TECHNICAL DETAILS.

- * **Connectivity:** WiFi and Bluetooth.
- * **Configuration:** through the App via Bluetooth.
- * **Power:** 12V-24V DC, various connectors available – MINILED and MINIFIT; for connection with most LED drivers.
- * **Fan timing:** user configurable; it can also be linked to temperature (this is especially recommended when CAPSULE is used to eliminate bad odours, since the higher the temperature, the greater the bad smell, ex. trash).
- * **Disinfection:** through UV-C LED light, with timed operation and automatic disconnection by motion and vibration sensors.
- * **Air purification:** air quality increase through the production of negative ions.
- * **Pads:** accepts both aroma pads (odour neutralising and fragrances) and felt pad.

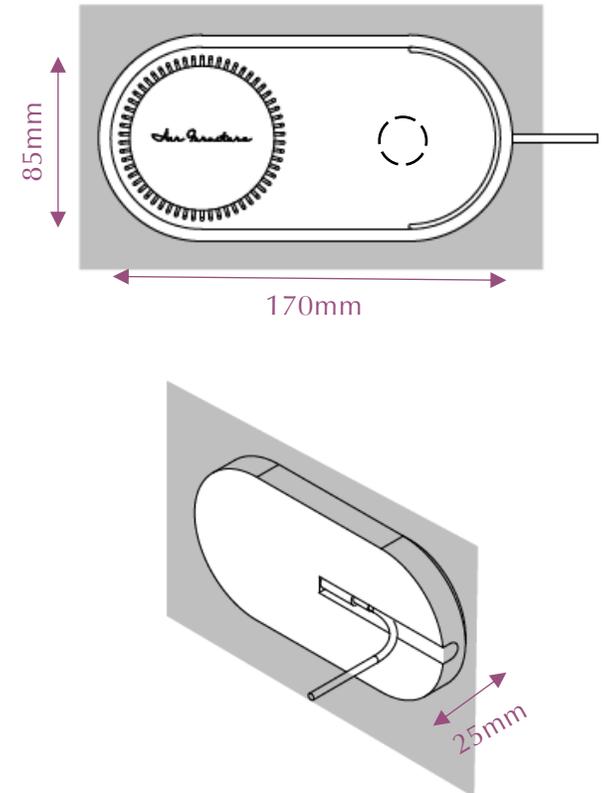


INSTALLATION.


Left position on
surface installation

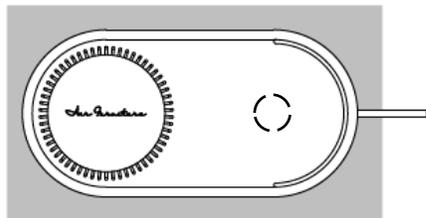


Right position on
surface installation

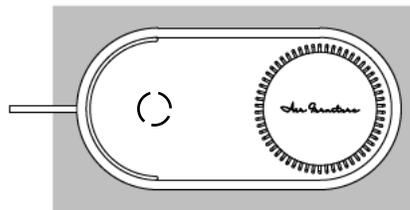


Vertical position on
surface installation

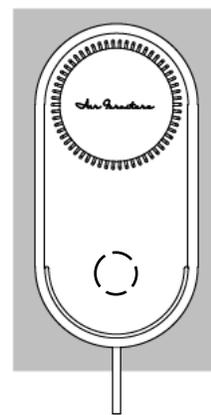

Cable detail for
surface installation

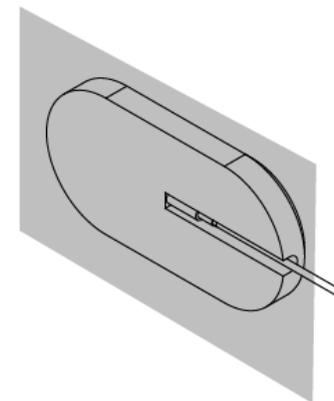

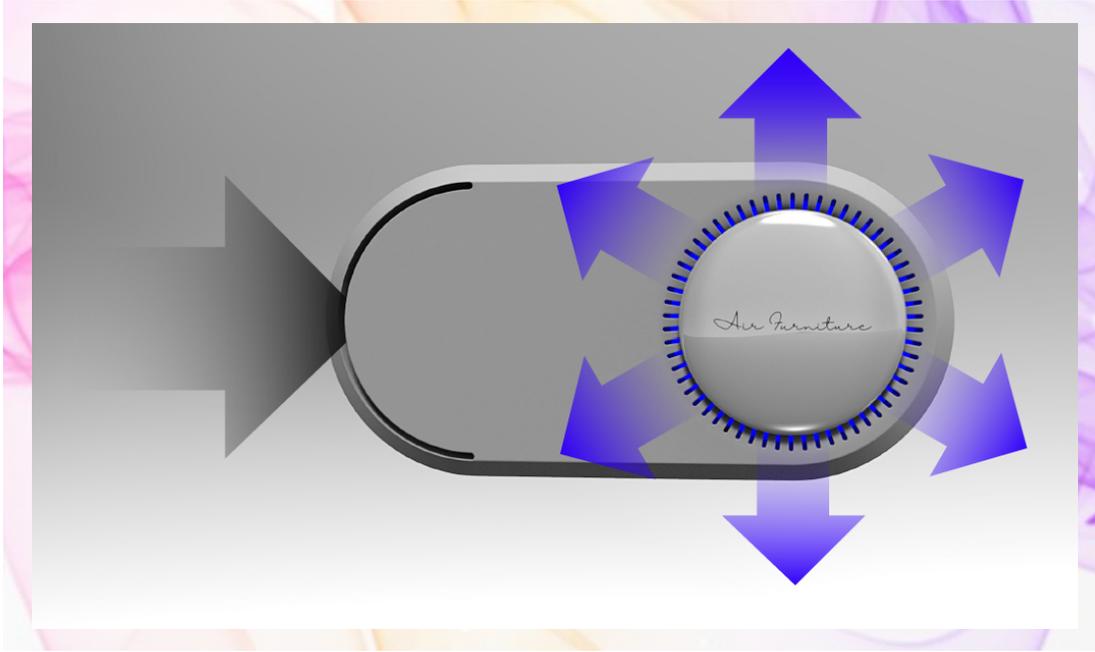


O PERATION.

The circular opening acts as an air inlet. This air is constantly moved and renewed thanks to the device's internal fan.

The air outlet is located under the circular cover, in which the aroma pad is placed.


The movement of the air will allow the aromatisation of the space.

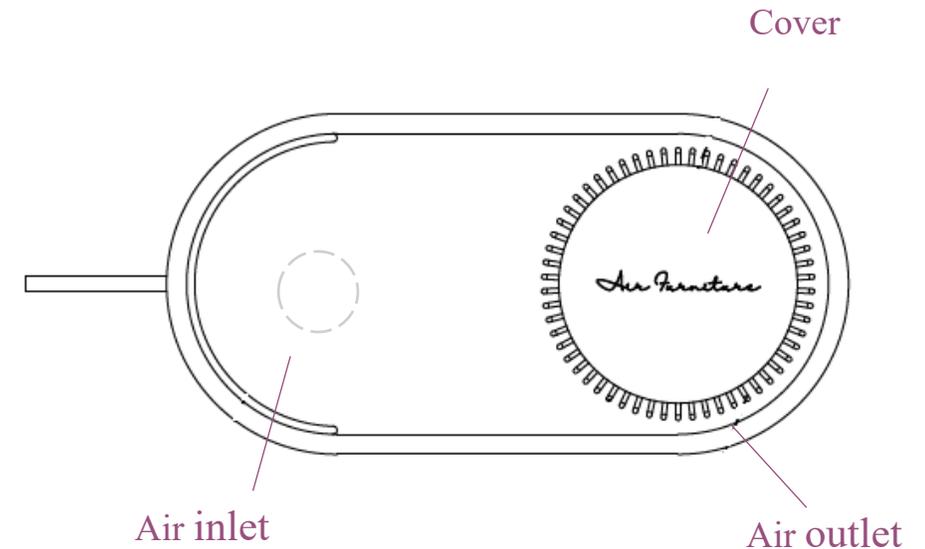

Changing the aroma pad


Instructions

- * Capsule is designed so that the aroma pad can be changed without having to move or uninstall the device.
- * The cover is attached to the main body through magnets, which make it easily and quick to remove and place back. Magnets will hold it together and prevent its fall.
- * Both the cover and the aroma pad can be extracted with the hand, without the need of any additional tools.

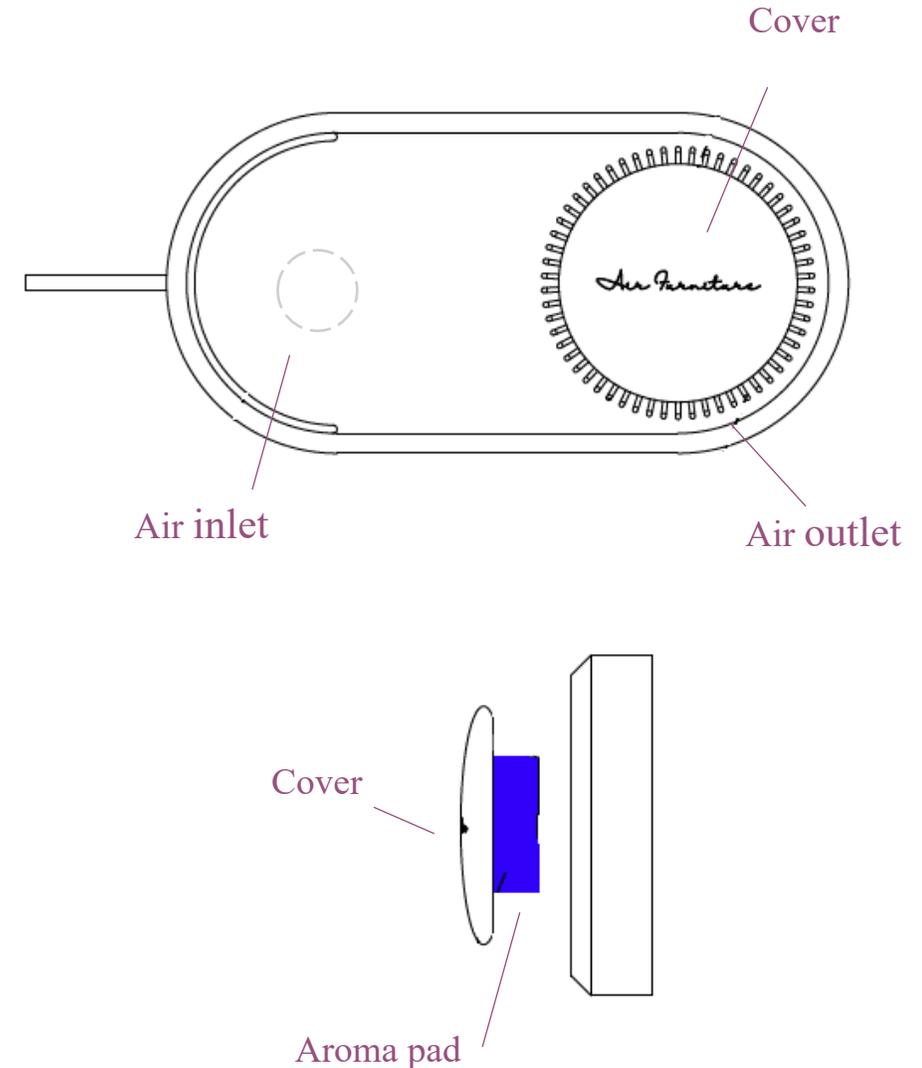

Changing the aroma pad

Steps

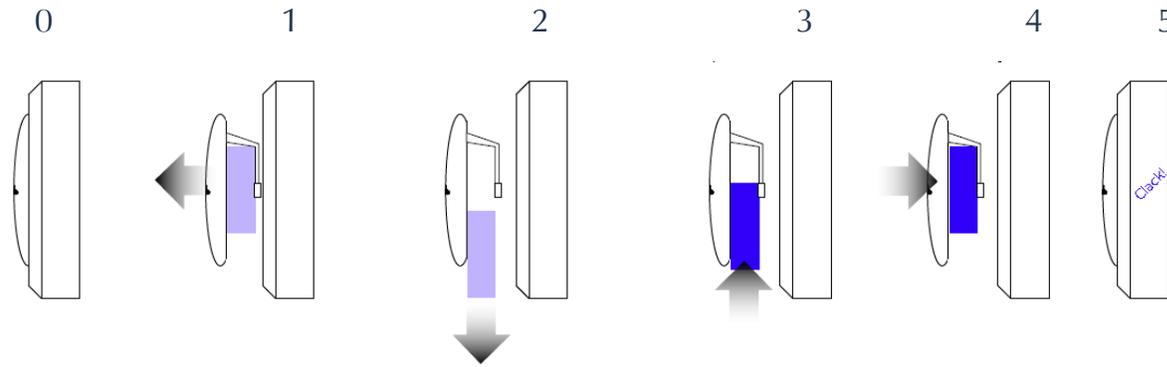

0. Do not remove the device from its setting.
1. With your hand, remove the cover. Magnets have a high power, so they may put up resistance.
2. Remove the aroma pad.
3. Place a new aroma pad.
4. Place the cover back into the device.
5. The “clack” sound guarantees its correct placement.

Contact us



+34 936 590 061



info@scentemotions.com

*Scent
Emotions*

The background of the image features a dense arrangement of small, light purple flowers, possibly lilacs, set against a dark, vertically-grained wooden surface. The lighting is soft, highlighting the delicate petals of the blossoms.

**"Nothing is more memorable than a
smell. One scent can be unexpected,
momentary and fleeting, yet conjure up a
childhood summer beside a lake in the
mountains..."**

DIANE ACKERMAN